

Changing your Broadband Modem Speed Setting

Instructions for a Netgear Modem Router:

Check your ADSL Router Settings on a Netgear Modem Router

- 1 Restart your Modem
- 2 Connect your computer or laptop to your modem via an Ethernet cable.
- 3 Open your web browser and type in the following in the address bar: **192.168.0.1**
- 4 You will be redirected to the Netgear modem page and you will be prompt to log in:
Username: admin
Password: password
- 5 Click **ADSL Settings** from the left side menu bar.
- 6 Check your **DSL Mode** setting and make sure it is set to **Auto**. This will ensure your modem router will connect to the fastest speed available to you at the exchange.
- 7 Save your setting changes.

Instructions for a DLINK Modem Router:

Check your ADSL Router Settings on a DLINK Modem Router

- 1 Restart your Modem router
- 2 Connect your computer or laptop to your modem via an Ethernet cable.
- 3 Open your web browser and type in the following in the address bar: **192.168.1.1**

4	<p>You will be redirected to the DLINK modem page and you will be prompt to log in:</p> <p>Username: admin</p> <p>Password: admin</p>
5	Click Advanced from the top menu bar.
6	Hover on Network Tools on the left side bar menu and select ADSL . You will now see the ADSL Modulation screen.
7	<p>Check your ADSL settings has the following modulations ticked:</p> <ul style="list-style-type: none"> • G.dmt Enabled • ADSL2 Enabled • ADSL2+ Enabled <div> ADSL SETTINGS <ul style="list-style-type: none"> <input checked="" type="checkbox"/> G.Dmt Enabled <input type="checkbox"/> G.Lite Enabled <input type="checkbox"/> T1.413 Enabled <input checked="" type="checkbox"/> ADSL2 Enabled <input type="checkbox"/> AnnexL Enabled <input checked="" type="checkbox"/> ADSL2+ Enabled <input type="checkbox"/> AnnexM Enabled </div>
8	Click Apply to save your changes

Instructions for a Netcomm Modem Router:

Check your ADSL Router Settings on a NetComm Modem Router

- If you currently have the NetComm NB16WV Modem Router you will not be required to make any changes to your modem settings.

All you have to do is restart your modem router.

The NetComm NB16WV will automatically detect the fastest speed available to you at the exchange.